



## Golf Impact Screen Care & Use

Thank you for purchasing a Carl's Place impact screen! Here are some tips to get started.


### First Things First

- **Take your impact screen out of the box as soon as possible.** The longer it stays folded in the box, the more likely it is to have longer-lasting creases when installed.

### Hanging Your New Impact Screen

- **Make sure you are using the correct side!** Your new impact screen has a front and a back, and **only the front is rated to withstand the impact of real golf balls.** The impact side will always be folded or rolled facing in to protect the front. The back will be facing out.
- Place the screen at least 12-16" away from the wall behind it.
- Hang the screen just flat enough to remove most folds and wrinkles, but loose enough to absorb ball strikes.
- Experiment with varying levels of tension to find the right balance between the flatness of the screen and how quickly the ball bounces back. A more tensioned screen will have greater bounceback but less wear, a looser screen will have less bounce-back but will wear faster.
- Keep the bottom of the screen as close to the floor as possible and keep all edges protected from direct ball strikes. Golf balls striking the grommets directly may damage the edging.

For more information on optimizing bounceback, scan the QR beach ball.

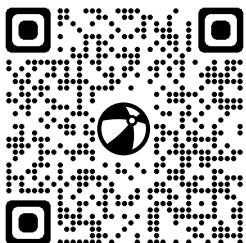

### Ways To Remove Wrinkles

- Time, screen weight and gravity will relax fold marks after install. This could take a few days or a few weeks depending on how long the screen was left folded.
- Use a clothes iron on a VERY LOW setting. Use on the back of the screen to avoid damaging the impact side.

### Using Your New Impact Screen

- Prevent your screen from getting dirty. Use new, white golf balls that are free from scuffs or permanent marker. Clean your clubs often.
- Stand a minimum of 10-12 feet away from the screen for safety. Customers who stand closer could experience more ball bounce back and increase the risk of injury.
- Carl's Place impact screens are heavy-duty fabrics designed to withstand the high impact of golf balls, however, like any material, they will show wear. Many of our golf screens are used in commercial facilities, struck all day long. Depending on the frequency of use, as well as the style and ability of the user will all contribute to the life of a screen.

### How To Clean Your Impact Screen

- Clean a dirty impact screen with a carpet shampooer or LA's Totally Awesome Cleaner.
- **Do not let a wet screen air dry.** Use a fan or hairdryer on a low heat setting to avoid water staining.

For more information on cleaning and caring for your screen, scan the QR mop and bucket.

